Tellumat

# Tanzanite
## Vintage 20
# CLASSIC TELEPHONE WITH REDIAL/RECALL

# USER MANUAL

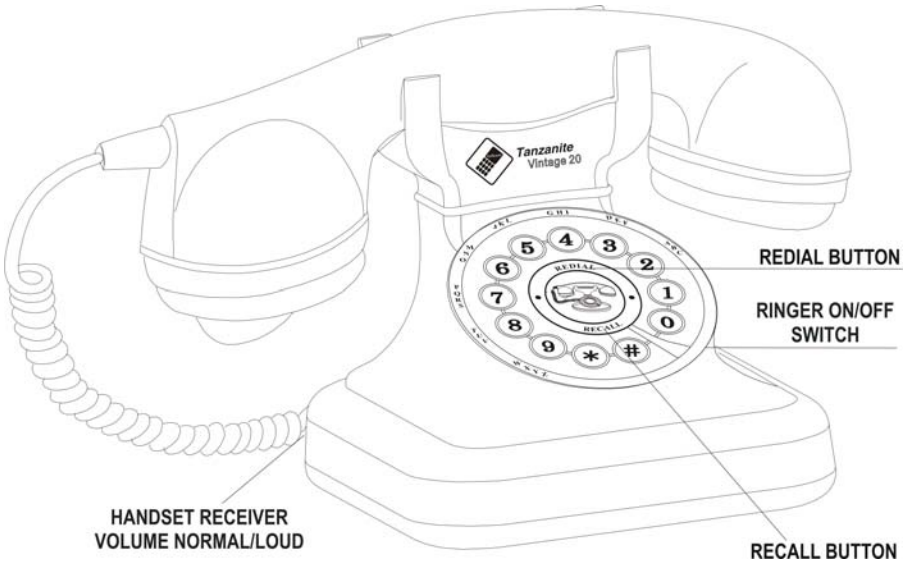
Tanzanite
Vintage 20
REDIAL BUTTON
RINGER ON/OFF
SWITCH
HANDSET RECEIVER
VOLUME NORMAL/LOUD
RECALL BUTTON

# Precautions

- Do not expose the telephone to direct sunlight or moisture.
- Do not use the telephone in the bathroom.
- Do not use the telephone outdoors.
- Do not use the telephone during a lightning storm.
- Do not install the telephone near open fires, heating appliances, air conditioning units, etc.
- Do not drop the telephone or handle it roughly.
- Do not allow magnetic objects to come into contact with the telephone receiver.
- Use a soft damp cloth to clean the telephone. Do not use strong or abrasive cleaning agents to clean the telephone.

**INTRODUCTION**

Congratulations on your purchase of the Tanzanite Vintage 20 telephone, which elegantly combines classic design with today's technology, offering convenient features. Please read this user manual carefully and store safely for future reference.

**PRE-INSTALLATION CHECKLIST**

1. Telephone Handset with coiled cord
2. Telephone Base
3. Line cord
4. User manual

### INSTALLATION

1. Plug the line cord into the line jack at the back of the telephone, then plug the other end into your telephone wall socket.
2. Plug the coiled handset cord into the handset jack at back of the telephone.
3. Place the handset on the cradle in your preferred orientation.

## OPERATION

### SETTING THE HANDSET VOLUME

The LOUD/NORM switch located at the back of the phone allows you to adjust your HANDSET RECEIVER volume for a comfortable listening level.

### MAKING AND ANSWERING CALLS

To obtain dial tone or answer an incoming call, simply lift the handset. To hang up, either replace the handset or depress the cradle hook switch.

### RINGER ON/OFF SWITCH

When you don't wish to be disturbed by incoming calls, slide the ringer switch at the back of the phone to the 'OFF' position. You can still use the phone to make outgoing calls, but any incoming calls will not cause the phone to ring. To restore normal operation, set the ringer switch back to the 'ON' position. Ensure that you make a note of when the ringer is disabled.

### REDIAL

The telephone stores the last number you have dialed in memory.
To redial the same number, lift the handset to obtain dial tone and press the REDIAL button once.

### RECALL

The Recall key is used with voice services (e.g. TalkPlus) and PABX systems to transfer or place calls on hold. Refer to your PABX system manual for further information.

### RINGER VOLUME

If the ringer volume is too loud for your comfort, padding may be slid under the base to soften the volume.

## CARING FOR THE TELEPHONE

1. Do not expose the phone to direct sunlight, extreme temperature, high humidity or severe vibration for a long period of time.
2. Keep the phone away from heating appliances and devices that generate electrical interference such as fluorescent lamps and motors.
3. Do not use benzine, thinners, or abrasive powder to clean the phone, wipe it with a soft dry cloth instead.
4. Do not disassemble the phone or have it repaired by unauthorized persons or agents. Unplug this product from the wall jack and refer to qualified service personnel if repair is required.

### Parallel Inter-Working

If the telephone is connected in parallel (two or more telephones on the same exchange line) and one of the other telephones is used simultaneously, correct operation cannot be guaranteed. It is therefore recommended that only one telephone be used at a time.

## SERVICE ENQUIRES

For any service or product information queries relating to this telephone, please call our ShareCall number 08602HELPU (0860243578) or visit our website on

www.phones4telkom.co.za.